

# AIRLAB SOFTWARE UNDER WINDOWS-7 64 BIT

The Airlab software is designed to work for Vista and Windows-7 in 32 bit mode.

If a PC runs under Windows 7 with 64bit, the Airlab software has to run in a compatibility mode.


Below is a link how this can be achieved:

<http://windows.microsoft.com/nl-BE/windows7/install-and-use-windows-xp-mode-in-windows-7>

You can install the Windows XP Mode on your Windows 7 machine.

<http://www.youtube.com/watch?v=eNFczLYBtrA>

After installing the Windows XP Mode you are able to install the Airlab software, and ready to use it!  
I'm sorry for the discomfort, but this seems to be the easiest and fastest way to run the software on a Windows 7 x64 machine.

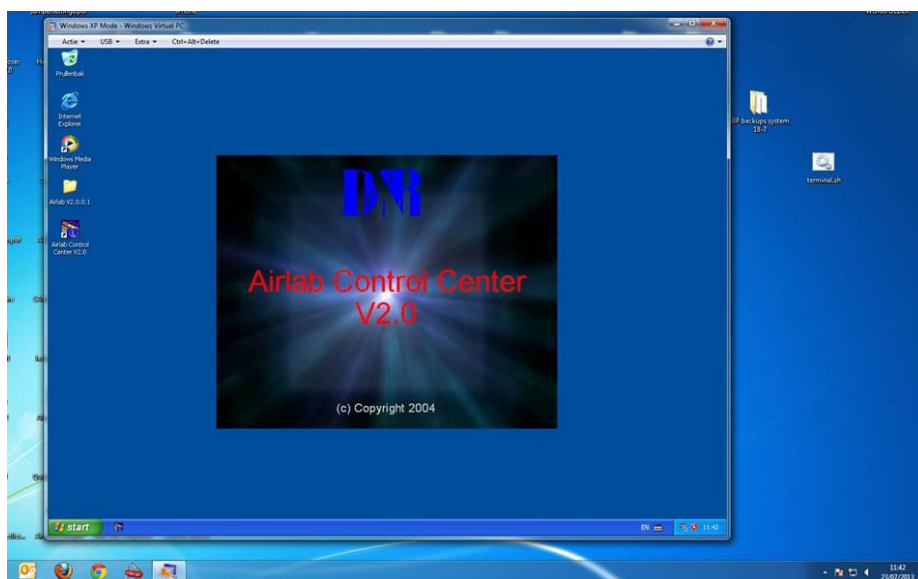

D&R Service team.