

"FOLDBACK SYSTEM"

USER MANUAL

DNR

FOLDBACK-SYSTEM

Setting up procedure


First remove all of the fixing screws from the powersupply unit, so that the wooden part of the supply can be separated from the front panel with all the electronics.

On the P.C.B. you see 6 terminal blocks.

On these strips the 16 core-cable has to be connected.

These terminal blocks are connected in parallel and each terminal is intended to be connected to only one foldback-mixer.


Terminal block on powersupply:

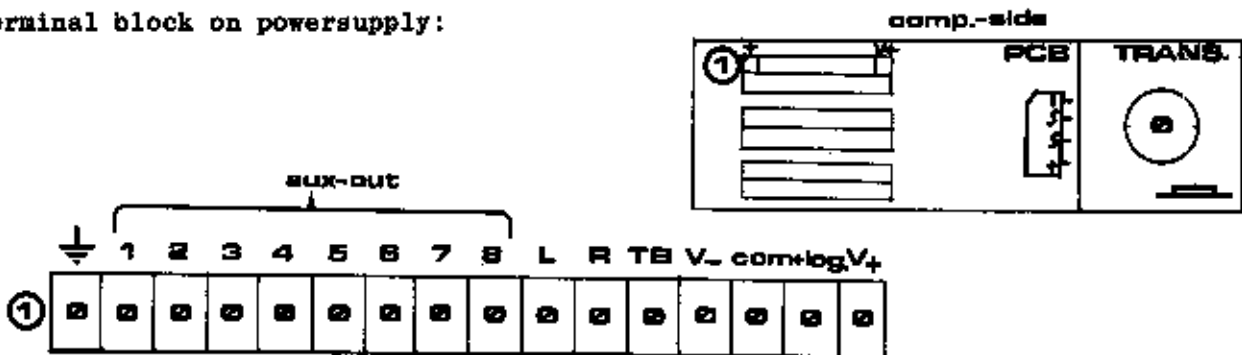

When the connection for each mixer has been completed, the wooden part has to be replaced and now all fixing screws (including the ones in the plastic bag) should be screwed in the wooden cabinet, to ensure earthing the metal foil inside.

Now remove the back of the foldback-mixer and connect the 16 core-cable to the terminal block on the P.C.B., as shown below.

Terminal block on foldback-mixer:

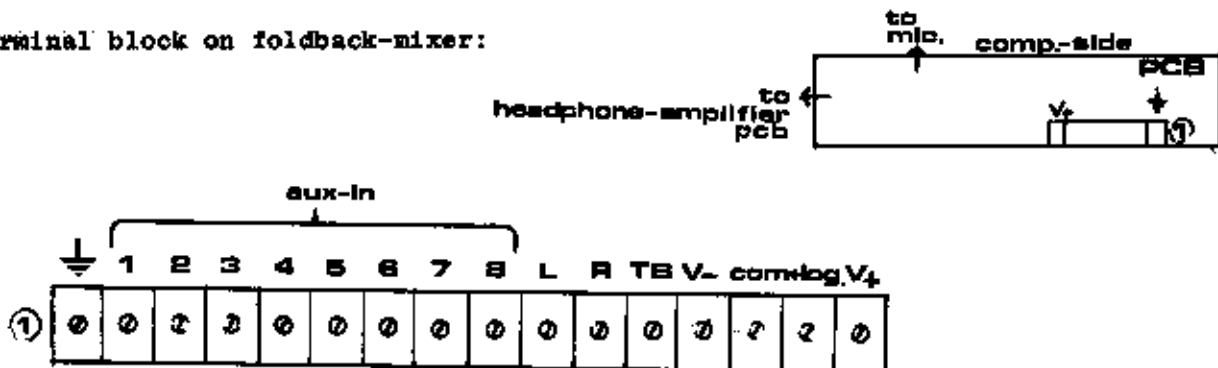

When finished, replace the wooden part in the same way as the powersupply unit.

Now the foldback-system is ready to operate.

The communication level is factory set, but can be set to any desired level, by the presetpot on the front panel.

The headphone sockets are connected in parallel and can drive any load of 8 Ohm or higher.