

# ON-AIR LIGHT WEBSITE DATA

## DESCRIPTION

A perfect matching ON-AIR light for all BROADCAST mixers.

You can of course use the unit too for other brands.

We call it ON-AIR Lamp but actually there is no lamp inside anymore, just everlasting high intensity red leds.

The unit is powered by a 12 volt DC 1 Amp external power supply.

And what's more... no hassle with how do I connect this thing to my AIRMATE-USB/AIRENCE-USB/AIRLAB or AXUM.

No complicated high voltage AC switching with external relays etc. etc.

What you only need is one stereo cable (wired tip/ring) coming from the MIC-ON connector on the back of the AIRMATE/AIRENCE/AIRLAB console that goes directly hardwired to a barrier strip inside the ON-AIR LIGHT. How easy is this for a change.

The power adapter (included in the delivery) will also be directly wired to the barrier strip inside the unit.

## FEATURES

Low current LED strip fed by external Power Adapter.

Directly controllable from any mixer without extra relays and mains power.

## SPECIFICATIONS

Pin-1= + 12 volt DC 200mA)

Pin-2= - 12 volt DC 200mA)

Pin-3= Control

Pin-4= Control

In case you want to connect 2x ON-AIR warning lights to one reed relay in the mixer, simply connect the control wires going to the mixer in series with each other, but in the right way!!

Note: Pin 4 of the control of ON-AIR-1 needs to be connected to Pin 3 of the control of ON-AIR-2. Both LEDS will go on when control 3 of ON-AIR-1 and Control-4 of ON-AIR-2 are shorted.

## VIDEO

Not available yet

## DOWNLOADS

<http://www.d-r.nl/assets/on-air-manual-1.1.pdf>

<http://www.d-r.nl/assets/onair-to-airlite2.pdf>

<http://www.d-r.nl/assets/onair-to-airmate.pdf>

<http://www.d-r.nl/assets/onair-to-airence.pdf>

<http://www.d-r.nl/assets/onair-to-airlab.pdf>