


# AIRLAB METER APPLICATION WITH REMOTE PC

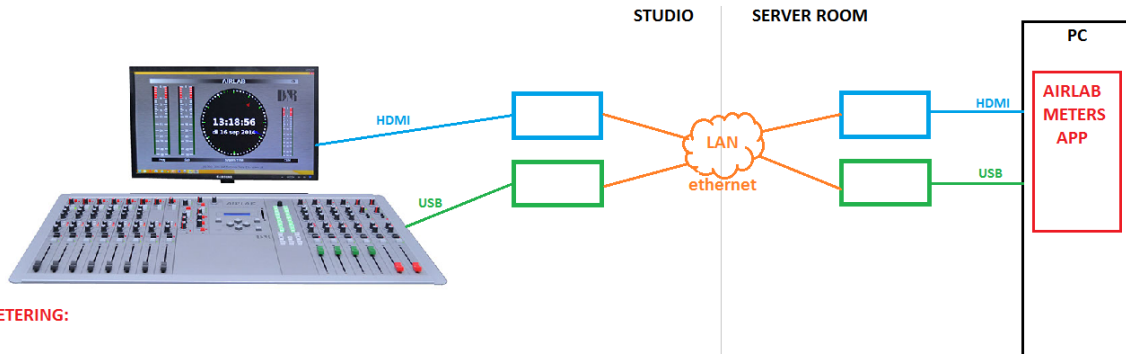

## METERING:

The Airlab DT sends metering data out over USB connection. A USB to CAT converter transmits this metering data over your LAN network. Another CAT to USB converter receives metering data from the network and transmits it to the server PC. The server PC is running 'Airlab Meters' application and provides its output at its HDMI port. A HDMI to CAT converter transmits the screen data over your LAN network. Another CAT to HDMI converter receives the screen data from the network and transmits it to the monitor located in front of your Airlab.